



1 Connect the Wireless-B USB Network Adapter

- A** Power on your PC.
- B** The Adapter comes with the USB cable you will use to connect the Adapter to your PC.
- C** Connect the other end of the USB cable to one of the USB ports on your computer.

Connect one end of then included USB cable to the USB port of the Adapter.

- D** Raise the antenna. Make sure the antenna is positioned straight up into the air, at a 90° angle from the Adapter. This will ensure optimum wireless operating range and performance.

The Power LED should light up when the Adapter is plugged in.



2 Install the Driver

After connecting the Adapter to your computer, you will install the driver and configure the Adapter.

- A** Windows XP will automatically detect the Adapter. Insert the Setup CD-ROM into your computer's CD-ROM drive. Click the radio button next to **Install the software automatically (Recommended)**. Then click **Next**.
- B** The *Hardware Installation* screen may appear and indicate that the Adapter has not passed Windows Logo testing. This Adapter has been tested and found to work with Windows XP. Click **Continue Anyway** to proceed with the installation.
- C** When Windows has finished installing the driver, click **Finish**.



2.4GHz
802.11b

Wireless-B
USB Network Adapter
Quick Installation for Windows XP



3 Configure the Wireless-B USB Network Adapters

A The Windows XP Wireless Zero Configuration icon will appear in your computer's system tray. Double-click the icon.


B The screen that appears will show any available wireless network. Select the network you want.

If your network uses a wireless security feature called Wired Equivalent Privacy (WEP) encryption, go to step C.

If this network does not have WEP encryption enabled, make sure the box next to **Allow me to connect to the selected wireless network, even though it is not secure** is checked. Click **Connect**, and go to step D.



B

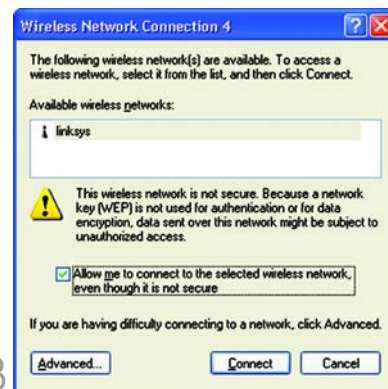


C Enter the network's WEP key in the *Network key* field, and re-enter it in the *Confirm network key* field. Click **Connect**, and go to step D.

D The Zero Configuration icon will indicate a wireless connection when your connection is active.

Congratulations! The installation of the Wireless-B USB Network Adapter is complete.

C

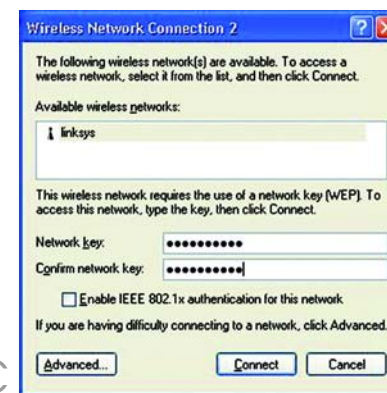

D



LINKSYS[®]
A Division of Cisco Systems, Inc.

For additional information or troubleshooting help, refer to the User Guide on the Setup CD-ROM. You can also call or e-mail for further support.

24-hour Technical Support
800-326-7114
(toll-free from US or Canada)

E-mail Support
support@linksys.com

Website
<http://www.linksys.com> or
<http://support.linksys.com>

RMA (Return Merchandise Authorization)
<http://www.linksys.com/support>

FTP Site
<ftp://ftp.linksys.com>

Sales Information
800-546-5797 (800-LINKSYS)

Linksys is a registered trademark or trademark of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries. Copyright © 2004 Cisco Systems, Inc. All rights reserved.