

QUICK INSTALLATION GUIDE

Simultaneous Dual-N Band Wireless Router

Model: WRT610N




Package Contents

- Simultaneous Dual-N Band Wireless Router
- Setup Software and User Guide on CD-ROM
- Quick Installation Guide
- Ethernet Network Cable
- Power Adapter

Installation

- A. Insert the Setup CD-ROM into your CD-ROM drive.

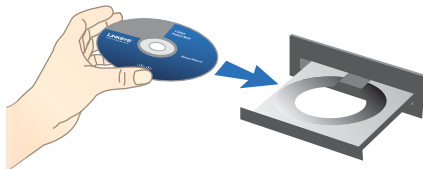


- B. To begin installation, on the *Welcome* screen, select your language from the drop down menu. Click **Next**.



- C. Select **I accept this agreement**. Click **Next**.



- D. The Linksys Easy Link Adviser (LELA) Setup Wizard checks your connections. Click **Next**.

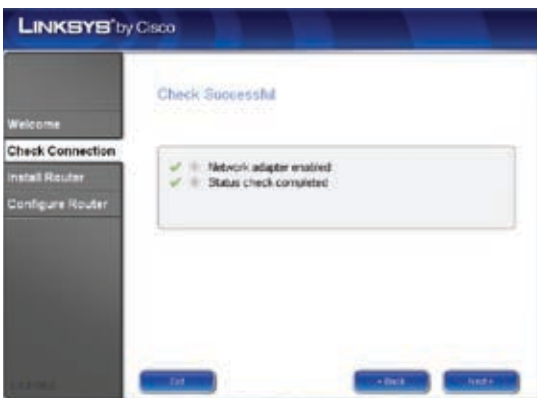


- E. The LELA Setup Wizard displays a series of screens that will guide you through the Router's physical installation and setup process. Click **Next** and follow the instructions in these screens.





- F. Follow the instructions until you see the *Configuration Complete* screen, click **Next**.

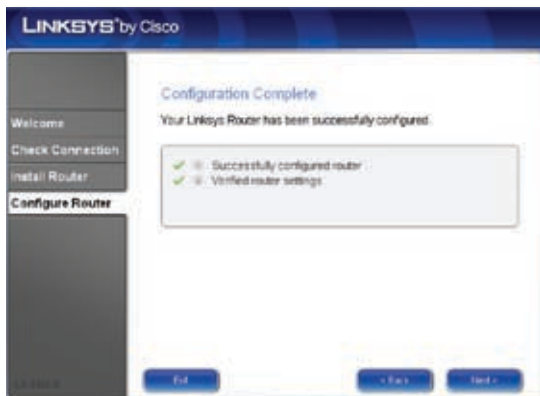

- G. When you see the *Network Configured* screen, click **Next** to close the LELA Setup Wizard.



Congratulations! Setup is complete.



NOTE: For more advanced settings and security options, refer to the User Guide on the CD-ROM.

For additional information or troubleshooting help, refer to the User Guide on the CD-ROM. Additional support is also available by phone or online.

24-Hour Technical Support
800-326-7114

Website
<http://www.linksys.com>

Support
<http://www.linksys.com/support>

RMA (Return Merchandise Authorization)
<http://www.linksys.com/warranty>

FTP Site
<ftp://ftp.linksys.com>

Sales Information
800-546-5797 (800-LINKSYS)

Linksys is a registered trademark or trademark of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries. Copyright © 2008 Cisco Systems, Inc. All rights reserved. Other brands and product names are trademarks or registered trademarks of their respective holders.

LINKSYS® by Cisco

