



Package Contents

- Wireless-N USB Network Adapter
- USB Extension Cable
- USB Extension Base
- Setup CD-ROM with User Guide
- Quick Installation

2.4GHz Wireless-N USB Network Adapter

Quick Installation

Wireless



1 Begin Installation

IMPORTANT: Do not install the Adapter in your PC until you are instructed to do so in Step 2 or the Adapter will not install correctly.

- A** The Network Adapter is installed and set up using the Setup Wizard that comes on the enclosed CD.
- B** To begin, insert the **Setup Wizard CD-ROM** into your CD-ROM drive. The Setup Wizard should run automatically, and the *Welcome* screen should appear.
- C** To install the Adapter, click **Click Here to Start** on the *Welcome* screen.
- D** After reading the License Agreement, click **Next** to continue the installation and Windows will begin copying the files onto your PC.
- E** Windows will begin copying the files onto your PC.
- F** The Setup Wizard will now prompt you to install the Adapter into your PC.

Proceed to Step 2.



C




D

2 Connect the Adapter

- A** Locate an available USB port on your PC.
- B** Connect the Adapter in one of three ways:
- 1 Insert the Adapter into the USB port.
 - 2 If you want to use the included USB Extension Base, first connect the USB Extension Base to the USB port on the PC, then insert the Adapter into the USB port on the Base.
 - 3 If you want to use the included USB Extension Cable, connect the Adapter to the female end of the USB Extension Cable, then connect the male end of the Cable to the PC.
- D** Windows will begin copying the driver files to your computer.
- E** Then, click **Next**.

Proceed to Step 3.

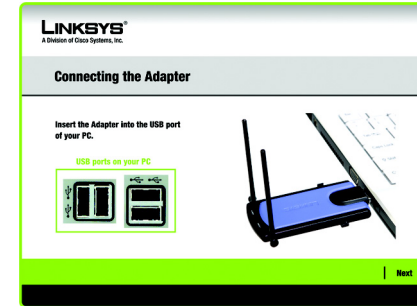

Connecting the Adapter

The next screen to appear will be the Available Wireless Networks screen. From this screen, you can launch one of the two setup methods.

Important: For Quick Installation, use this document only if your network appears on the Available Wireless Networks screen.

Advanced Setup: If you are using Manual Setup, click the **Advanced Setup** button and follow the on screen prompts.

Setting Up the Adapter with Available Networks

On the *Available Wireless Networks* screen, the available networks are listed in the center table by Available Wireless Networks. Select the wireless network you wish to connect to and click the **Connect** button. (If you do not see your network listed, you can click the **Refresh** button.)

If the network uses wireless security, you will need to configure security on the Adapter. If not, you will be taken directly to the *Congratulations* screen, shown in Step B.

A If wireless security is enabled on this network, you will see one of these wireless security screens.

Wireless Network Name	Ch	Signal	Security
linksys	11	100%	Disabled
linksys	11	100%	WPA2-Personal
linksys	11	100%	WEP (64-bit)
linksys	11	100%	WPA-Personal

Available Wireless Network

WEP Key Needed for Connection

Select **64-bit** or **128-bit**. Then, enter a passphrase or WEP key.

Passphrase - The passphrase must match the passphrase of your wireless network. This is case-sensitive and should not be longer than 16 alphanumeric characters.

WEP Key - The WEP key must match the WEP key of your wireless network. For 64-bit encryption, enter exactly 10 hexadecimal characters. For 128-bit encryption, enter exactly 26 hexadecimal characters. Valid hexadecimal characters are "0" to "9" and "A" to "F".

Click **Connect** and go to Step B.

WPA Personal Needed for Connection

Select **TKIP** or **AES** for the Encryption type, then enter a Pre-shared Key.

Encryption - The encryption must match the encryption of your wireless network

Pre-shared Key - The Pre-shared Key must match the

WEP Key Needed

NOTE: Your passphrase must match the passphrase of your other wireless network devices and is compatible with Linksys wireless products only. (Non-Linksys wireless products, require a WEP key to be entered.)

WPA Personal Needed

Pre-shared Key of your wireless network and must be 8-63 characters.

Click **Connect** and go to Step B.

WPA2 Personal Needed for Connection

Enter a Pre-shared Key. The Pre-shared Key must match the Pre-shared Key of your wireless network and must be 8-63 characters.

Click **Connect** and go to Step B.

B After the Adapter is configured for the network, the *Congratulations* screen will appear. Click **Finish** to complete the setup.

Congratulations! Setup is complete.

NOTE: After the Adapter is installed, the *Wireless Network Monitor* screen will open and its icon will appear in your PC's system tray. Double-click the icon if you want to open the Monitor to find available wireless networks or for configuration changes.



Wireless Network Monitor icon

WPA2 Personal Needed

B

LINKSYS
A Division of Cisco Systems, Inc.

For additional information or troubleshooting help, refer to the User Guide on the Setup CD-ROM. You can also call or email for further support.

24-hour Technical Support
800-859-2379
(toll-free from US or Canada)

E-mail Support
support@linksys.com

Website
<http://www.linksys.com> or
<http://support.linksys.com>

RMA (Return Merchandise Authorization)
<http://www.linksys.com/support>

FTP Site
<ftp://ftp.linksys.com>

Sales Information
800-546-5797 (800-LINKSYS)

Linksys is a registered trademark or trademark of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries. Copyright © 2006 Cisco Systems, Inc. All rights reserved.

WUSB300N-QI-60815NC BW