



Package Contents

- Handset
- Two AAA NiMH batteries
- Charger
- Base Station
- Power Adapter for the Charger
- Power Adapter for the Base Station
- RJ-11 telephone line cord
- RJ-45 ethernet cable

Dual-Mode

Internet Telephony Kit with Skype™

iPhone

Quick Installation



1 Charging the Handset

IMPORTANT: To use Skype you will need an available ethernet port. If you have traditional phone service (landline), you will also need an available telephone wall jack.


- Remove the cover of the battery compartment.
- Insert the two NiMH rechargeable, AAA batteries (included). Make sure the polarities are correct. (The + and - ends of the batteries should be in the + and - slots of the compartment.)
- Slide the cover upward until it snaps into place.
- Plug the charger's power adapter into an electrical outlet. Place the handset on the charger. For the initial charge, let the batteries charge for 14 hours before using the handset. This maximizes battery performance and life.
- Pick up the charged handset to make a call. To power off the handset, press the **Power/End Call** key until you will see the Skype menu. Scroll to **Switch Off**. Press **Select** and the phone will power off.



NOTE: The handset may become warm during the initial charge..

2 Connecting the Base Station

- If you have a landline, connect a RJ-11 telephone line cord (included) to the LINE port of the base station. Then connect the other end to your telephone wall jack. If only the landline is connected you can only make and receive calls over the landline.
- Connect the Ethernet RJ-45 cable (included) to the Ethernet port of the base station. Then connect the other end to a network Ethernet jack. If only the Ethernet cable is connected, you can only make and receive Skype or Skypeln calls.
- Connect the included power adapter to the power port of the base station. Then plug the power adapter into an electrical outlet.

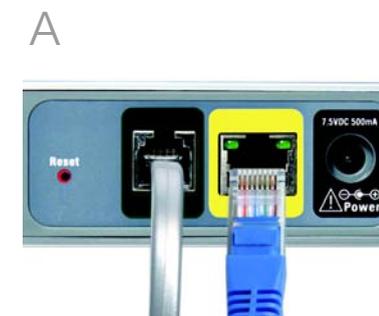


3 First Time Phone Use

When you turn on the phone for the first time, you will be asked to:

- Select the language. If the language you want does not appear on-screen, scroll to find the correct language and press **Select** to confirm.
- Review the agreement. Use the navigation button to move up or down. Read the agreement and press **Accept** to proceed.
- Set your country code. For the phone to work correctly according to your country's standards, you must use the code for the country you are calling from. For example, the U.S. and Canada use the country code of 1. Press **Clear** to make a correction. Press **Enter** to confirm the country code.
- Set your area code. To be able to return local, national or international calls received on the Landline, you must set your area code. Your phone will update the information and reset itself.

- Create a Skype Account or sign in to your existing Skype Account. Each Skype account has a unique Skype Name with a password. If your Skype Name is the same as another Skype user, it will not be accepted. Your existing Skype Name needs to be at least 6

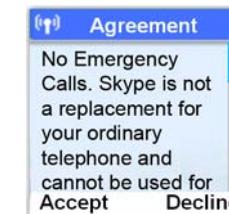

E

characters and can be any combination of letters, numbers and symbols. Your password needs to be at least 4 characters. This password is different from the system PIN of the phone. Each phone user can have their own Skype account.

It is necessary to set the clock to the correct time zone of the location where your Skype phone is being used before initial phone use.

The time zone is based on Greenwich Mean Time (GMT). If you don't know your time zone, you can obtain it from <http://www.greenwichmeantime.com>.

- Press **Menu**.
- Scroll to **Settings**. Press **Select**.
- Scroll to **Time & Date**. Press **Select**.
- Scroll to **Time Zone**. Press **Select**.
- Scroll to the correct zone. Press **OK** when finished. The correct time and date setting will be entered.



F

Skype

The Skype LED is blue and is a solid light during a Skype call.

PHONE LINE

The PHONE LINE LED is amber and is a solid light during a landline call.

Page

Press this button to page your handset. To stop the page, press the right soft key on your handset.

Staying within Range

If you move outside of the base station's range during a call, an alarm tone will sound and the Base/Handset Link icon will flash on the handset's display screen. Your call will be disconnected if you do not move back within range.



IMPORTANT: Emergency calls cannot be placed through a Skype line. If you dial an emergency number, it will automatically be placed through a landline if one is available. If a landline is not available the emergency call will not go through.



Important regulatory warnings and instructions are listed in "Appendix C: Regulatory Information" of the User Guide, which is on the Setup CD-ROM. Read carefully before installing the Telephony Kit.

BEFORE USING YOUR TELEPHONE EQUIPMENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND INJURY, INCLUDING THE FOLLOWING:

- Read and follow all warnings and instructions marked on the product.
- Do not use this product near water, laundry tub, in a wet basement, or near a swimming pool.
- Do not place this product on an unstable table. The product may fall and be damaged.
- This product should never be placed near or over a radiator or heat register.
- This product should be operated only from the type of power source indicated on the label.
- Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by persons walking on it.
- Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- Avoid using a telephone during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use this product to report a gas leak in the vicinity of the leak.
- Do not use this product near intensive care medical equipment or by persons with pacemakers.
- Due to the radio signals between base station and handset, wearers of hearing aids may experience interference in the form of a humming noise.

BATTERIES

- Use only the battery type listed in the instruction manual. Do not use lithium batteries or non-rechargeable batteries that may damage the handset and charger.
- Do not dispose of the battery in a fire, as they can explode.
- Do not open or mutilate the battery. Released electrolyte is corrosive and can cause damage to the eyes or skin. It can be toxic if swallowed.
- Avoid contact with metal objects when handling the battery. These objects could short out the batteries or cause the conductor to overheat resulting in burns.
- Do not attempt to recharge the battery cell by heating it. Sudden release of battery electrolyte can cause burns or irritation to the eyes or skin.
- Observe the proper polarity, or direction, of any battery. Reverse insertion of the battery cell can result in leakage or explosion.
- Remove the battery cells if you do not plan to use the product for several months at a time.
- Discard any "dead" batteries because they are likely to leak into the product.
- Do not store this product or the battery in a high temperature area. Battery stored in a freezer or refrigerator should be protected from condensation during storage and defrosting. Battery should be stabilized at room temperature before using.
- Your battery is rechargeable and can be recycled once it outlives its usefulness. Depending upon your local and state law, it might be illegal to dispose of this battery into a municipal waste system. Check with your local solid waste company for more information on your recycling options for the battery cells.

SAVE THESE INSTRUCTIONS

LINKSYS®

A Division of Cisco Systems, Inc.

For additional information or troubleshooting help, refer to the User Guide on the CD-ROM. You can also visit the following websites for more troubleshooting help:

SKYPE

Troubleshooting
<http://support.skype.com>

Website
<http://www.skype.com>

LINKSYS

Website
<http://www.linksys.com> or
<http://www.linksys.com/support>

FTP Site
<ftp://ftp.linksys.com>

Sales Information
800-546-5797 (800-LINKSYS)

Linksys is a registered trademark or trademark of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries. Copyright © 2006 Cisco Systems, Inc. All rights reserved.

CIT400-QI-61213 A DF