

Instant Ethernet® EtherPCI LAN Card II

Model No.: LNEPCI2

Overview

After installing the EtherPCI hardware in your PC, follow these instructions to install the network driver. For troubleshooting tips during setup, see the Troubleshooting section of your User Guide.

Note: Do not click **Cancel** or **Skip** at any time during the installation. Doing so will prevent the driver from being properly installed on your PC.

Installing Your EtherPCI LAN Card II

1. Start up your PC in Windows 98.
2. Windows 98 will automatically detect the EtherPCI Lan Card. The *Update Device Driver Wizard* window appears.



3. Click **Next**.
4. Windows will then display the screen below. Choose *Search for the best driver for your device (Recommended)*. Click **Next**.



5. Insert the *Linksys EtherPCI Lan Card II Adapter* driver disk into your floppy disk drive.

Quick Installation For Windows 98

This sheet will guide you through the basic steps needed to install the *EtherPCI Lan Card II* onto your network. If you have any problems during installation, refer to the **Troubleshooting** section of the **User Guide**.

6. The following screen should appear. Choose *Specify a location*. Type **A:\Win98** (where a: refers to your floppy disk drive) in the pop-up box and click **Next**.



7. Windows will display the following screen. Click **Next**.



8. Windows may prompt you to insert your Windows 98 CD-ROM during the installation. Do so and click **OK**.
9. When asked if you want to restart your PC, remove the floppy disk and CD-ROM and click **Yes**. Otherwise, reboot your PC manually.



The Windows 98 driver installation is now complete.

Refer to the User Guide for instructions on configuring network protocols. Consult your Microsoft documentation for information on your network configuration, if needed.