

Start Here

for Setup and Connection

For advanced configuration, refer to the User Guide on the CD-ROM.

- Use this Guide for first time setup of your Router.
- Setup wizard requires a PC with Microsoft Windows 98SE, Me, 2000 or XP
- Continue to step A.


Package Contents

- · Wireless-G Broadband Router with Speed-
- Setup CD-ROM with Symantec Internet
- User Guide on CD-ROM
- Power Adapter
- Ethernet Network Cable
- Quick Installation Guide
- Registration Card

Wireless-G

Broadband Router with SpeedBooster Quick Installation

Insert the Setup CD into your CD-ROM drive.

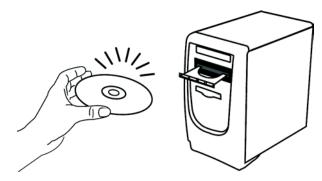

This Welcome screen will appear on your monitor.




Click the **Click Here to Start** button.




Follow these steps



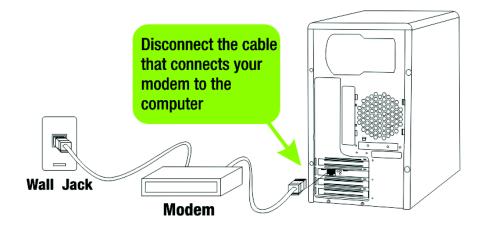



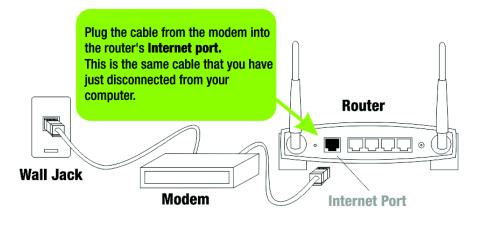


2.4 GHz


3

The Router comes with a blue **network cable.** Plug one end of the network cable into your computer's network port.


Your computer's **network port** is the same port that was previously connected to the modem.

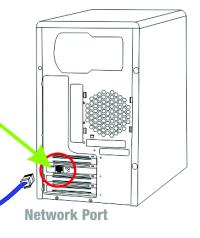



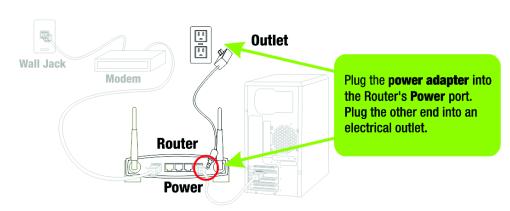




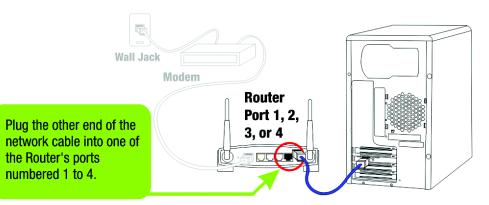



On the Router's front panel, the **Power, Internet** and at least one of the numbered **(1, 2, 3, or 4)** LEDs should be lit. If not, make sure the cables are securely connected.

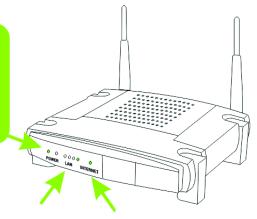

When you are finished with the Wizard and are waiting for your Internet connection, this screen will appear. Continue with the steps on the Setup Wizard and follow the on-screen instructions.



When you have successfully finished setting up the Router, this screen will appear.





Linksys is a registered trademark or trademark of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries. Copyright © 2003 Cisco Systems, Inc. All rights reserved.

WRT54GSv4-QI-507026NC BW