LINKSYS® by/par Cisco

cisco

QUICK INSTALLATION GUIDE

Wireless Router

Installation

1. Insert the Setup CD-ROM into your CD-ROM drive.

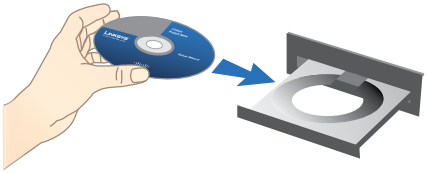

2. If you use a PC, click **Start Setup**, and proceed to Step 4.

NOTE FOR WINDOWS USERS ONLY: The Setup Wizard will guide you through the steps to set up the Router. It will also install Cisco Network Magic software to help you configure and manage your network.

If you use a Mac, skip to step 3.

3. Double-click the CD on your desktop.

Then double-click the **Device Setup** icon.

4. Select your language from the drop down menu. Click **Next**.

5. Read the License Agreement. To accept the terms and continue with the installation, select **I accept this agreement**. Click **Next**.

6. The Setup Wizard will guide you through the Router's physical installation and setup. Follow the instructions on each screen, and click **Next** to continue.

LINKSYS by Cisco
Welcome
Check Connection
Install Router
Configure Router
Step 2/4

LINKSYS by Cisco
Welcome
Check Connection
Install Router
Configure Router
Step 3/4

LINKSYS by Cisco
Welcome
Check Connection
Install Router
Configure Router
Step 4/4

7. On the *Network Configured* screen, click **Next** to finish the setup.

Congratulations! Setup is complete.

Wireless Connection to Your PC

The Setup Wizard will guide you through the steps to install Cisco Network Magic on your computer. When the *Network Tasks* screen appears, click **Go Wireless**, and follow the on-screen instructions. Cisco Network Magic will help you create a wireless connection between the Router and your computer.

Wireless Connection to Your Mac

1. Click the **Wireless** icon on the menu bar located in the upper right corner.

2. Select your wireless network.

3. If security is enabled, you will be prompted for a password. (The password, also known as a network security key, was saved in the Linksys.txt file on your desktop. Double-click the file to open it.)

   Enter the password, and then click **OK**. (If you want your computer to remember the password, select **Remember password in my keychain**. If this is not selected, you will be prompted for the password whenever you connect.)

For additional information or troubleshooting help, refer to the User Guide on the CD-ROM. Additional support is also available by phone or online.

Website
http://www.linksysbycisco.com

24-Hour Technical Support
800-326-7114

Support
http://www.linksysbycisco.com/support

Sales Information
800-546-5797 (800-LINKSYS)

© 2009 Cisco Systems, Inc. All rights reserved. Cisco, the Cisco logo, Linksys, Network Magic, and the Network Magic logo are trademarks or registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries. Mac and the Mac logo are trademarks of Apple Computer, Inc., registered in the U.S. and other countries. All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company.

LINKSYS® by/par Cisco

cisco